

GARMIN OREGON QUICK GUIDE



Turning the GPS device On and Off

- 1- to turn on the device, press the Power Key
- 2- to turn off the device, press and hold the Power Key



Battery Information

This device uses two AA batteries. You will be provided with a set of batteries. You can purchase extra batteries in many shops on the way. Please use precharged NiMH or lithium batteries for the best results.

To install the batteries:

- 1- Lift the latch and remove the battery cover.
- 2- Insert the batteries observing polarity.
- 3- Replace the battery cover and push the latch down.


Before starting your ride please reset all data in the GPS device. This will bring the trip computer back to zero. To reset the data:




1- Touch "Setup"



2- Touch "Reset"

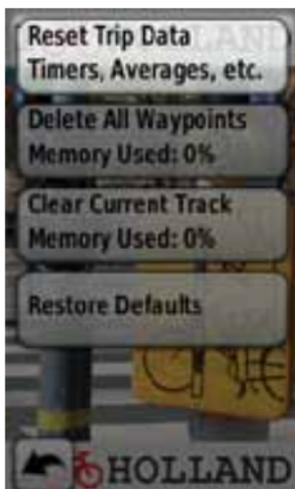

3- Touch "Reset Trip Data, etc"

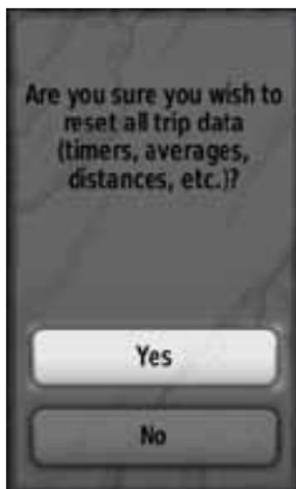

4- Confirm by touching "Yes"


You can view the track in three different ways while riding. We advise to use the Automotive Mode. To change the view of the track:



1- Touch "Setup"



2- Touch "Map"

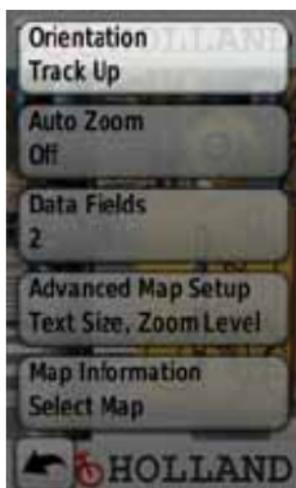

3- Touch "Orientation"



4- Touch
"Automotive Mode"

Starting your ride

Your customized routes will be preloaded onto the GPS as tracks. To choose one track to be followed:



1- Touch "Where To"



2- Touch "Tracks"



3- Choose the name of the track




4- Touch "Go"

Mark a Waypoint

You may want to store your current location to be able to find it back later again.




1- Touch "Mark Waypoint"

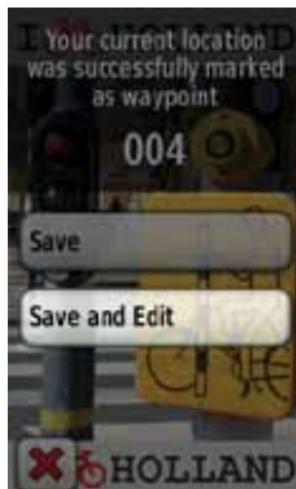

2- Touch "Save and Edit"



3- Touch "Change Name"

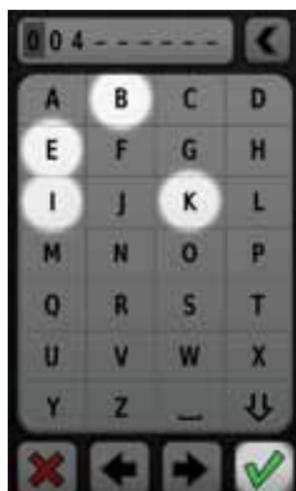

4- Enter name and touch the green check-mark

If you are riding a track and you want to **get back to your hotel** the shortest way:

- 1- Touch "Where To"
- 2- Touch "Stop navigation"



3- Touch "Where To" again



4- Touch "Waypoint"



5- Choose your hotel



6- Touch "Go"

These are the most common functions of the Garmin Oregon used by us riders. You can find the full user's manual in our website.

Good to know:

1- This GPS device needs to connect with several satellites before finding it's actual location. It may take a few minutes from the moment you switch it on until it is ready to go.

2- Should this device suddenly stop working or not finding it's way, please turn it off and on again. These problems are usually solved with this "reset".

3- Always take this navigation device with you. Remember not to leave it attached to the bike if you enter a shop or go for a walk leaving the bike behind.

We wish you a safe and enjoyable ride.

I  HOLLAND